


Configuring your service for Aussie Broadband nbn™


NOTE – This guide is for the Netcomm NF10W, but the settings will be applicable to all routers/service types.

1. Open a web browser.
2. Enter **192.168.20.1** into the address bar.
3. You will be prompted for a username and password. If your modem has been preconfigured by Aussie Broadband, the username will be 'admin' and the password will be in your Aussie Broadband welcome package. If the modem has been factory-reset the username and password will both be 'admin'.
4. Select the option 'basic setup'
5. Under basic setup select 'Ethernet WAN'

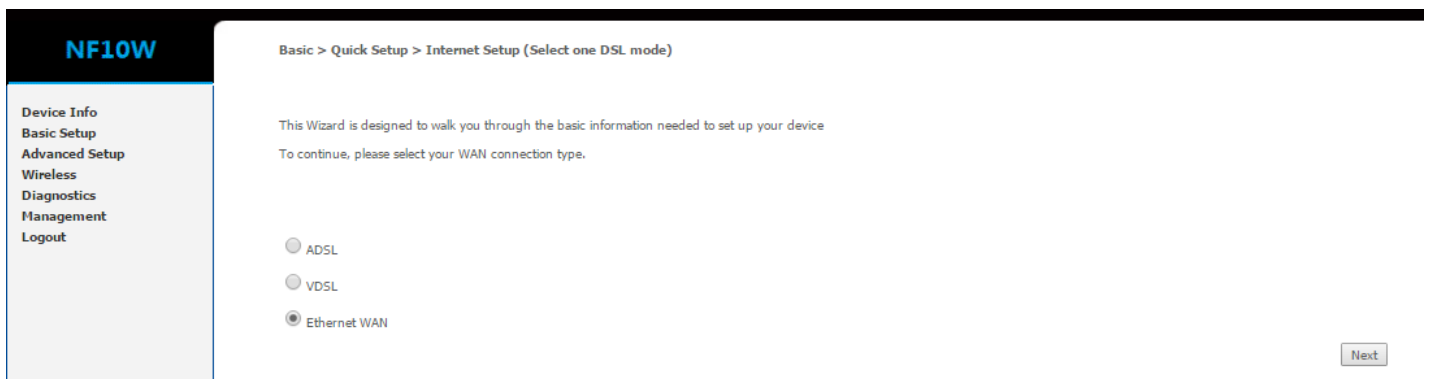


The screenshot shows the 'Basic > Quick Setup > Internet Setup (Select one DSL mode)' page. The left sidebar contains a menu with 'Basic Setup' selected. The main content area has the following text: 'This Wizard is designed to walk you through the basic information needed to set up your device. To continue, please select your WAN connection type.' There are three radio button options: 'ADSL', 'VDSL', and 'Ethernet WAN', with 'Ethernet WAN' selected. A 'Next' button is located at the bottom right.

6. Select 'IP over Ethernet (IPoE)'.

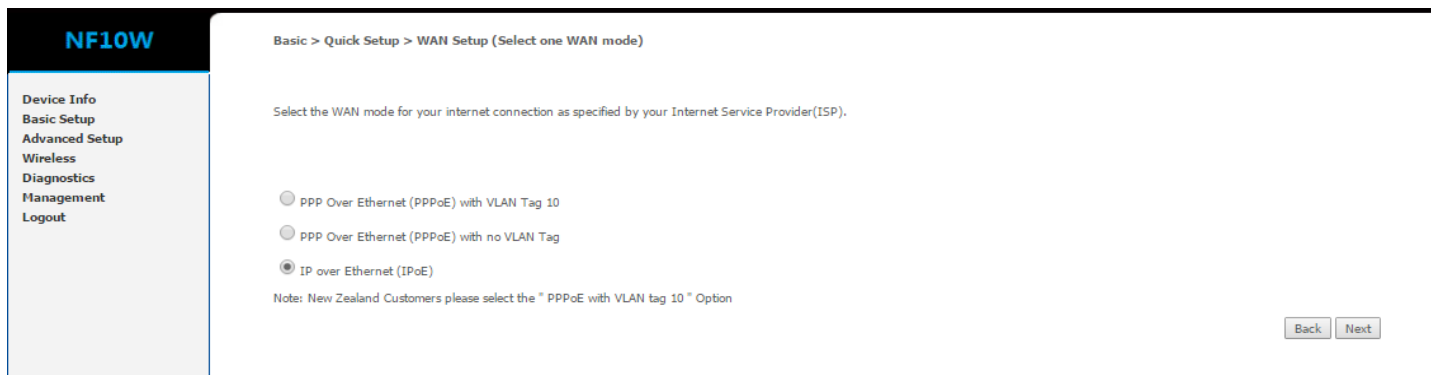

The screenshot shows the 'Basic > Quick Setup > WAN Setup (Select one WAN mode)' page. The left sidebar contains a menu with 'Basic Setup' selected. The main content area has the following text: 'Select the WAN mode for your internet connection as specified by your Internet Service Provider(ISP).' There are three radio button options: 'PPP Over Ethernet (PPPoE) with VLAN Tag 10', 'PPP Over Ethernet (PPPoE) with no VLAN Tag', and 'IP over Ethernet (IPoE)', with 'IP over Ethernet (IPoE)' selected. A note below the options reads: 'Note: New Zealand Customers please select the " PPPoE with VLAN tag 10 " Option'. 'Back' and 'Next' buttons are located at the bottom right.

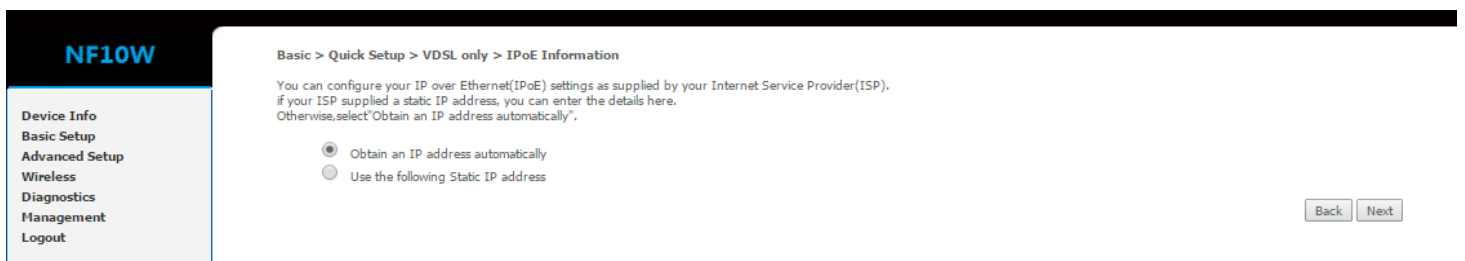

The screenshot shows the 'Basic > Quick Setup > VDSL only > IPoE Information' page. The left sidebar contains a menu with 'Basic Setup' selected. The main content area has the following text: 'You can configure your IP over Ethernet(IPoE) settings as supplied by your Internet Service Provider(ISP). if your ISP supplied a static IP address, you can enter the details here. Otherwise,select"Obtain an IP address automatically".' There are two radio button options: 'Obtain an IP address automatically' (selected) and 'Use the following Static IP address'. 'Back' and 'Next' buttons are located at the bottom right.

7. Select the option 'Obtain an IP address automatically'.
8. Congratulations, you should now be able to access the internet. (refer to page 25 for wireless details)

